

# ASSEMBLY INSTRUCTIONS

## GROUP NO. F1923

### DESCRIPTION: DINING CHAIR

Read instruction carefully prior to assembly .

Thank you for purchasing this quality product. Check carefully for small parts which may have come loose during shipment.


Remove all components from pack and place table top upside down on soft surface such as carpet or cloth to prevent scratching the finish. Identify and count all parts as specified below.

Do not tighten bolts until assembly is complete

NO.	HARDWARE PACK		Q' TY	NO.	PARTS LIST		Q' TY
A		ALLEN BOLT (ø1/4"*38mmL)	2PCS	1		Chair Back	1PC
B		ALLEN BOLT (ø1/4"*60mmL)	4PCS				
C		ALLEN BOLT (ø1/4"*75mmL)	4PCS	2		Cushion Seat	1PC
D		LOCK WASHER (ø1/4")	10PCS				
E		FLAT WASHER (ø1/4"*19mm)	10PCS	3		Leg	2PCS
F		ALLEN KEY (4MM)	1PC				
G		Wood Dowels (ø10*30mm)	1PC				


DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED.

STEP: 1

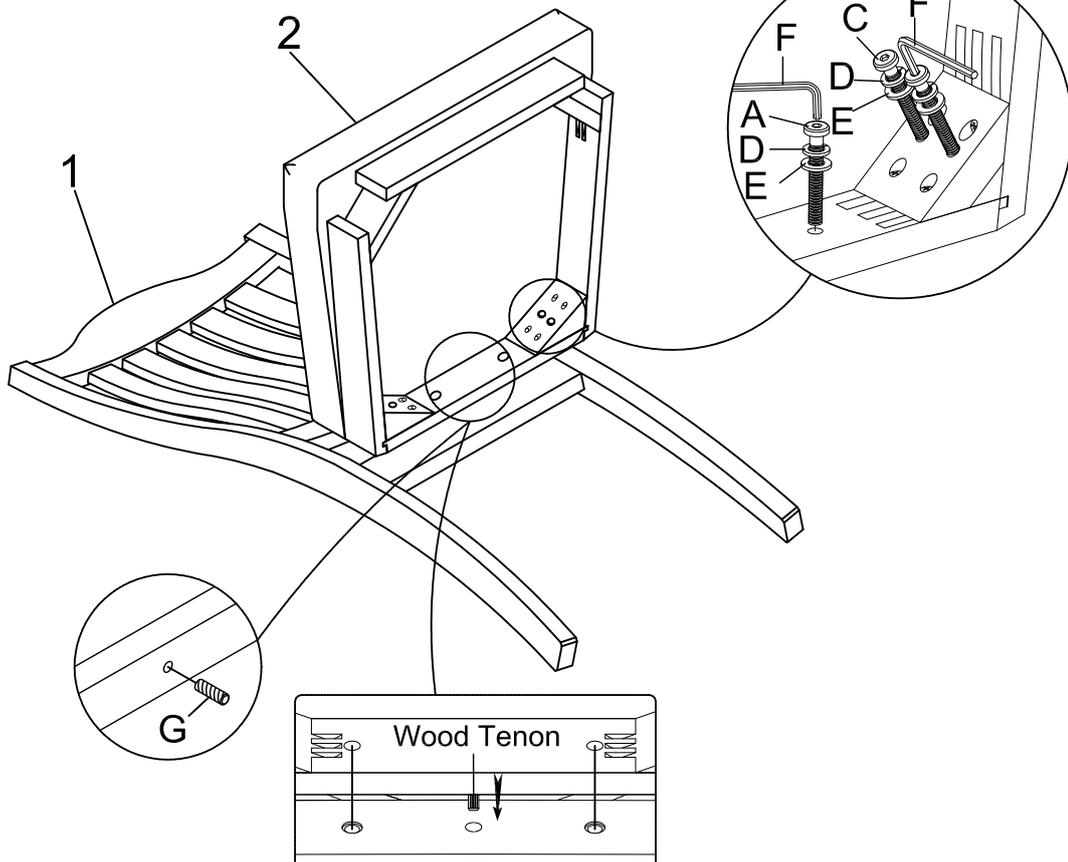


**ASSEMBLY INSTRUCTIONS**  
**GROUP NO. F1923**  
**DESCRIPTION: DINING CHAIR**

STEP: 2

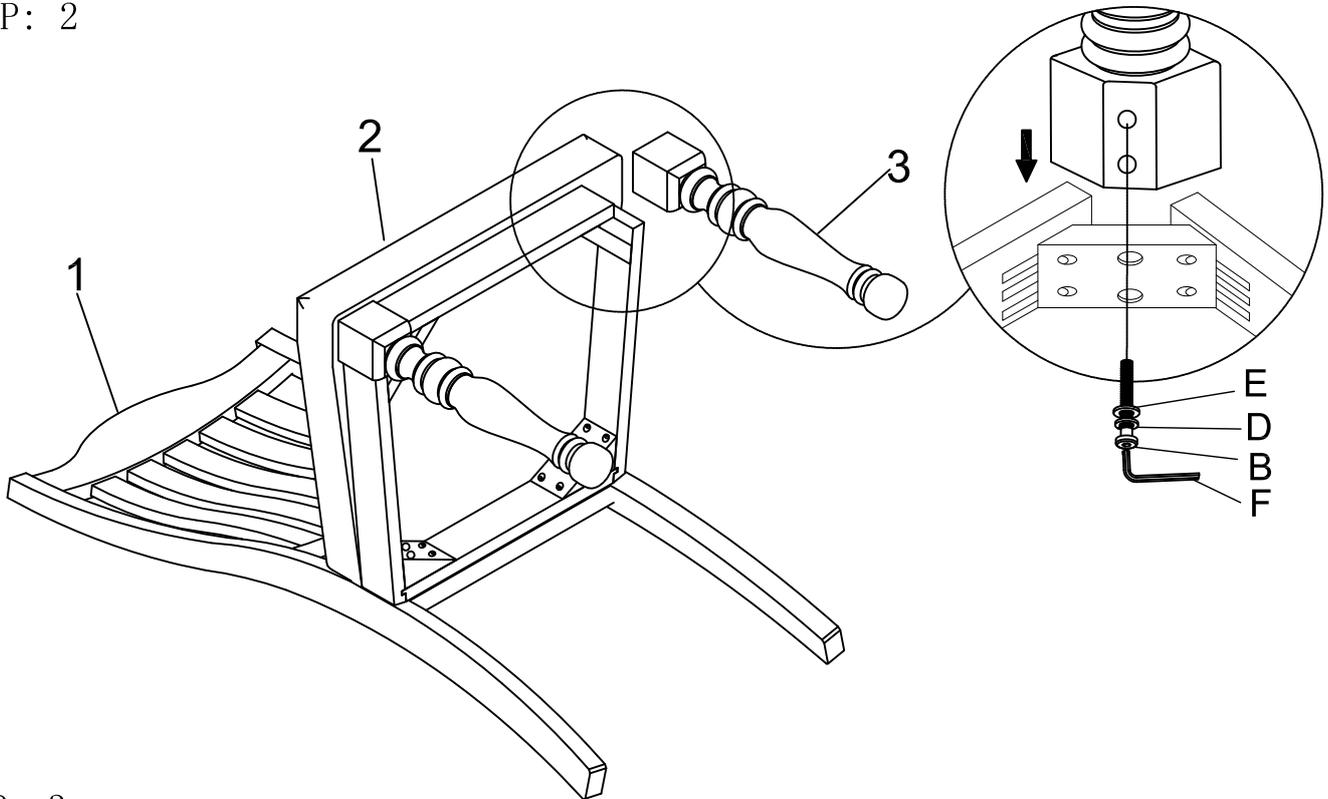

STEP: 3

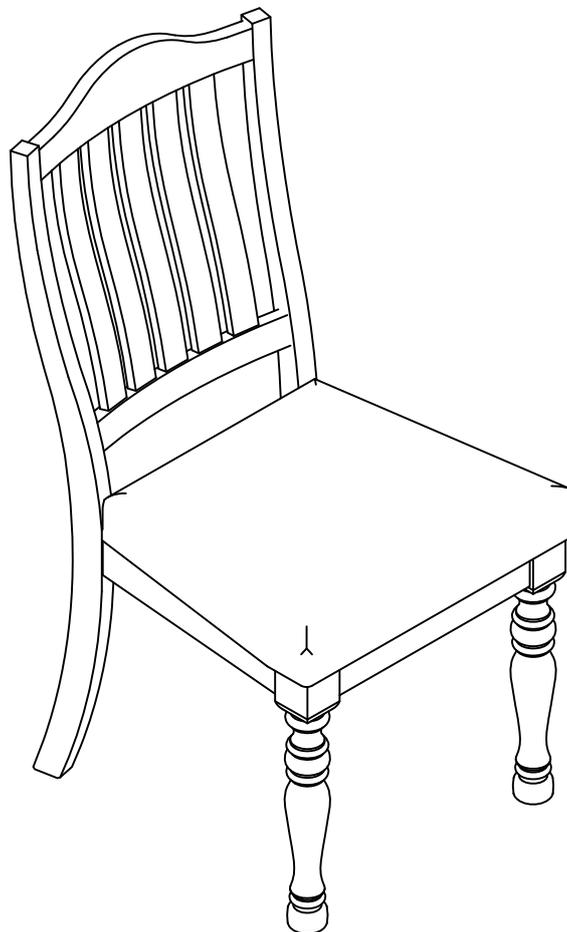

**Assembly Completed**